


PRECOR[®] USA
STRENGTH

S3.25

Leg Press Option

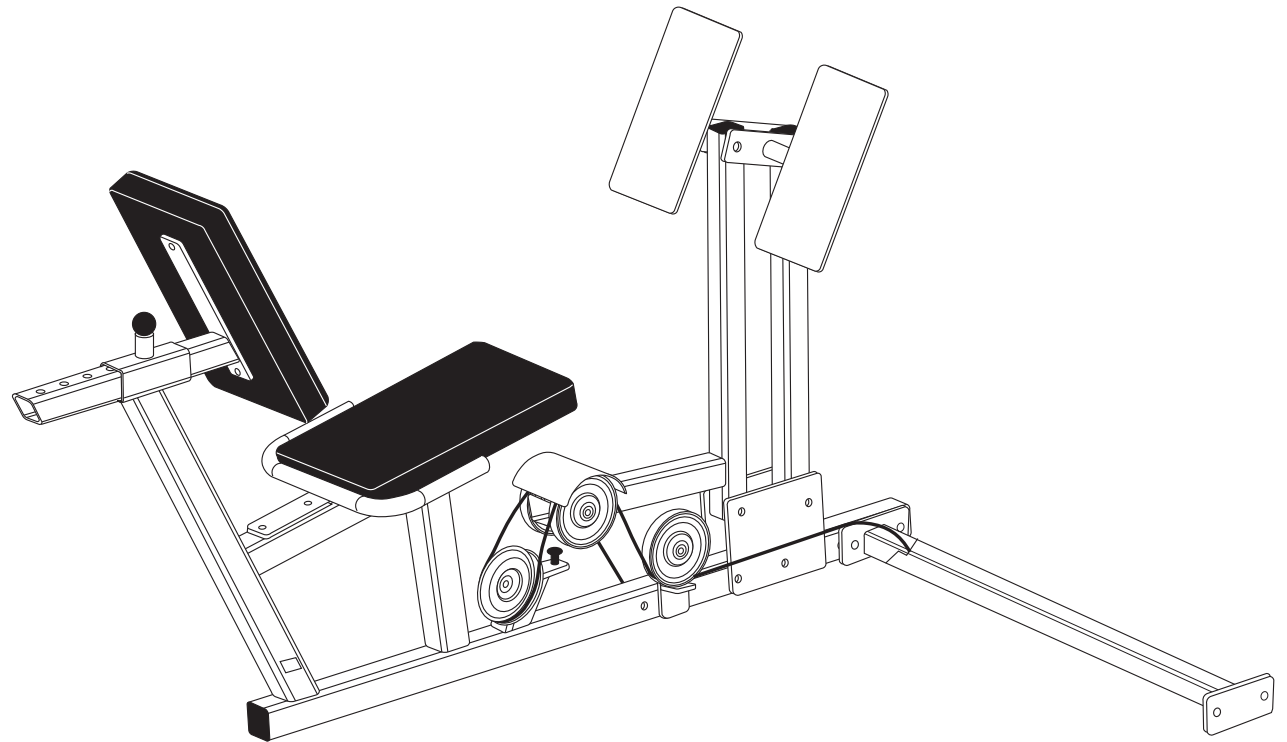

Assembly Instructions

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician.

Il est conseillé de subir un examen médical complet avant d'entreprendre tout programme d'exercice. Si vous avez des étourdissements ou des faiblesses, arrêtez les exercices immédiatement.

When using exercise equipment, basic precautions should always be taken, including the following:

- **Read all instructions before using the Leg Press Option. These instructions are written to ensure your safety and to protect the unit.**
- **Do not allow children on or near the equipment.**
- **Use the equipment only for its intended purpose as described in this guide. Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.**
- **Wear proper exercise clothing and shoes for your workout—no loose clothing.**
- **Use care when getting on or off the unit.**
- **Do not overexert yourself or work to exhaustion.**
- **If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.**
- **Never operate the unit when it has been dropped or damaged. Return the equipment to a service center for examination and repair.**

- **Never drop or insert objects into any opening in the equipment. Keep hands away from moving parts.**
- **Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.**
- **Do not use the equipment outdoors.**

Personal Safety During Assembly

- It is strongly recommended that a qualified dealer assemble the equipment. **Assistance is required.**
- Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.
- Assemble and operate the Leg Press Option on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access.

The Leg Press Option is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with your Precor equipment.

Obtaining Service

Do not attempt to service the Leg Press Option yourself. This unit does not contain any user-serviceable parts.

For information about product operation or service, check out the Precor web site at www.precor.com or contact an authorized Precor dealer or a Precor factory-authorized service company. To locate the dealer or service person nearest you, call 1-800-4-PRECOR.

If you call or e-mail Customer Service, have your serial and part numbers available.

You can find the serial number printed on a label on the Upright Seat Support of the Leg Press Option. For future reference, write the serial number in the space below.

Serial number: _____

Table of Contents

	Important Safety Instructions	2
	Personal Safety During Assembly	2
	Obtaining Service	2
1	Before You Begin	4
	Unpacking the Equipment	4
2	Preparations	5
	Required Tools	5
	Installation Requirements	5
	Assembly Tips	5
3	Assembly Instructions	6
	1. Remove the Shroud	7
	2. Attach the Cross Brace to the S3.25	8
	3. Assemble the Frame	9
	4. Assemble the Seat Pads	11
	5. Route the Cable	12
	6. Assemble the Cable and Pulleys	13
	7. Replace the Shroud	15
4	Adjustments	16
	1. Stretch the Cable	16
	2. Rotate the Cam Washer	17
	3. Adjust the Rubber Bumper on the Leg Press Option	18
	Warranty Card	Back cover
	Specifications	Back cover

1

Before You Begin


Thank you for purchasing the Leg Press Option for your Precor equipment. This option will add a new dimension to your strength-training regimen. For proper installation, please read this guide thoroughly and follow the assembly instructions.

Unpacking the Equipment

The Leg Press Option is carefully tested and inspected before shipment. Precor ships the unit in several pieces that require assembly. Two people are required to assemble this equipment. Ask for assistance during the assembly process.

- Review the *Installation Requirements* on the next page.
- Carefully unpack the pieces and lay them on the floor near the place where you plan to use the equipment.

If any items are missing, contact the dealer from whom you purchased the unit or call 1-800-4-PRECOR to find the dealer nearest you.

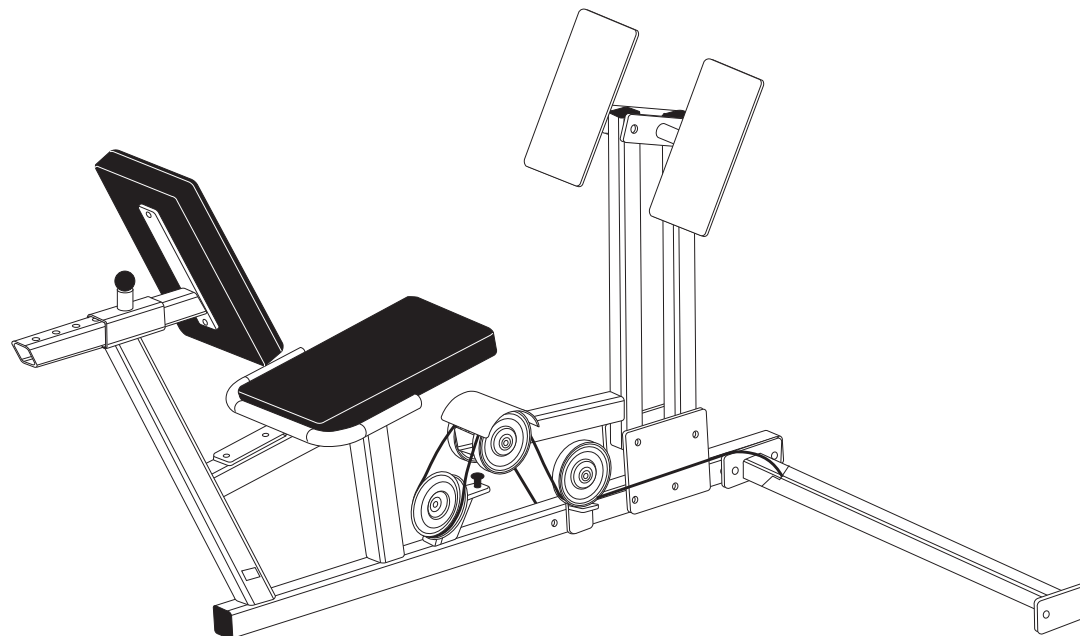

2

Preparations

CAUTION: To set up this equipment, you will need assistance. Do not attempt assembly by yourself.

You must review and follow the instructions in this guide. If you do not assemble and use the Leg Press Option according to the following guidelines, you could void the Precor limited warranty.

Required Tools

You need to obtain these tools before assembling the unit:

- ¾-inch socket wrench
- ¾-inch box-end wrench
- ⅞-inch socket wrench
- ⅞-inch box-end wrench
- Two adjustable pliers or crescent wrenches
- Standard set of metric Allen wrenches
- Utility knife or scissors
- Measuring tape


Installation Requirements

Follow these installation requirements when assembling the unit:

- **Fill out and mail the limited warranty card.** The warranty card is found on the back cover of this guide.
- **Set up the Leg Press Option on a solid, flat surface.** A smooth, flat surface under the unit helps keep it level. A level unit has fewer malfunctions.
- **Provide ample space around the machine.** Open space around the machine allows for easier access.
- **Insert all bolts in the same direction.** For aesthetic purposes, insert all the bolts in the same direction unless specified (in text or illustrations) to do otherwise.
- **Leave room for adjustments.** Tighten fasteners such as bolts, nuts, and screws, so that the unit is stable, but leave room for adjustments. **Do not** fully tighten fasteners until instructed in the assembly steps to do so.

Assembly Tips

- A 6-inch scale is provided at the bottom of every assembly instruction page. Use this scale to identify the correct size bolts and spacers. The head of a bolt is not used in measuring the length of a bolt.
To find out the length of a particular bolt, measure its shank (the long, narrow part beneath the head). Refer to the following diagram.
- Read all caution notes on each page before completing that step.

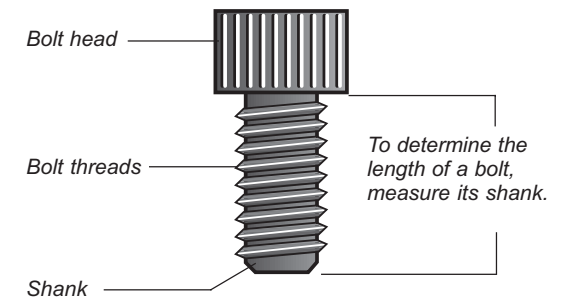

- Some pieces have extra holes that you will not use. Use only those holes indicated in the instructions and illustrations.
- While you may be able to assemble the Leg Press Option by using the illustrations only, refer to the text for important safety cautions and notes.

3

Assembly Instructions

Assembly of the Leg Press Option takes professional installers about 1 hour to complete. If this is the first time you have assembled this type of equipment, plan on significantly more time.


Professional installers are highly recommended!

CAUTION: Obtain assistance! Do not attempt to assemble the Leg Press Option by yourself. Because of the weight and size of the Leg Press Option, you could be injured or damage the equipment. Review the *Installation Requirements* on page 5 before proceeding.

The Leg Press Option comes in one box. It can be installed on either the S3.25 or S3.45 Precor Strength Training Equipment. Note that the location where you attach the Cross Brace to the Seat Frame differs. As you read through the assembly instructions, be sure that you are using the correct mounting holes for your unit.

Be careful to assemble the components in the sequence presented in this guide.

Note: As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so.

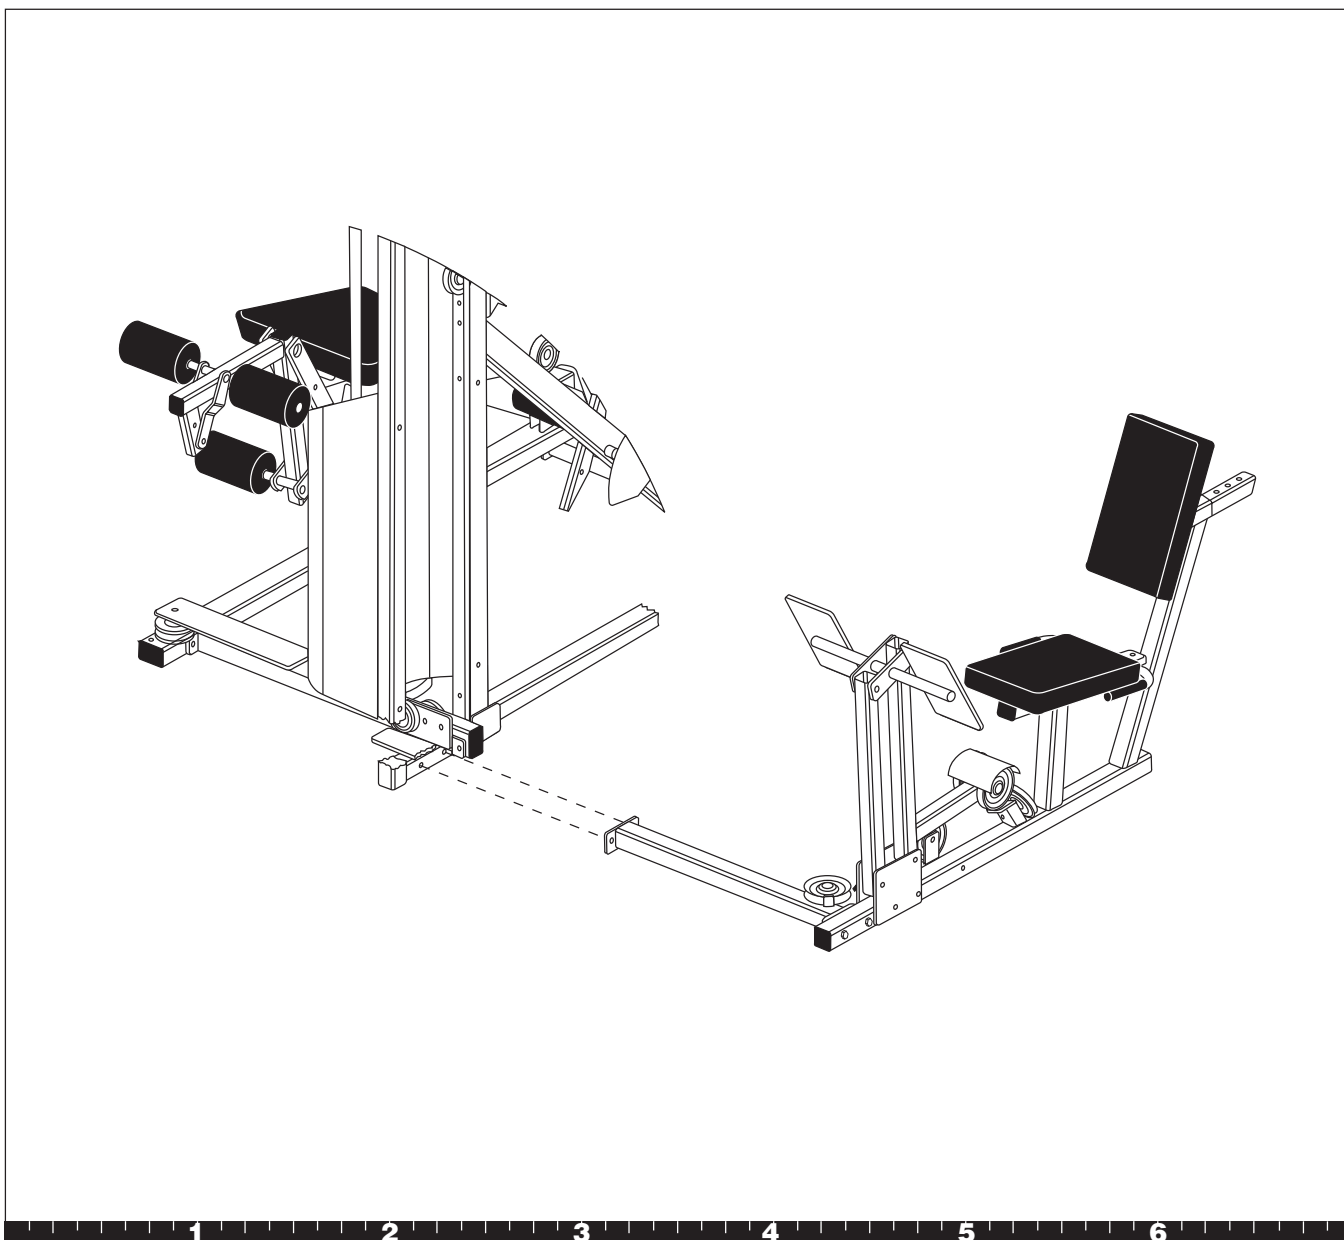

1. Remove the Shroud


Important: For ease of assembly, the fasteners and hardware for each step are labeled and packaged in separate bags.

Note: If you are assembling the Leg Press Option along with your S3.25, go directly to Step 2.

Before you can attach the Leg Press Option to the unit, you must remove the Shroud.

- A. Remove the Shroud by loosening and removing six 2 $\frac{3}{4}$ -inch bolts
six washers
six locknuts
- B. Pull the Shroud away from the S3.25 and lay it and its fasteners on the floor in a secure place.

Note: The top of the Shroud has a notch in it to help you clear the Top Beam fastener.

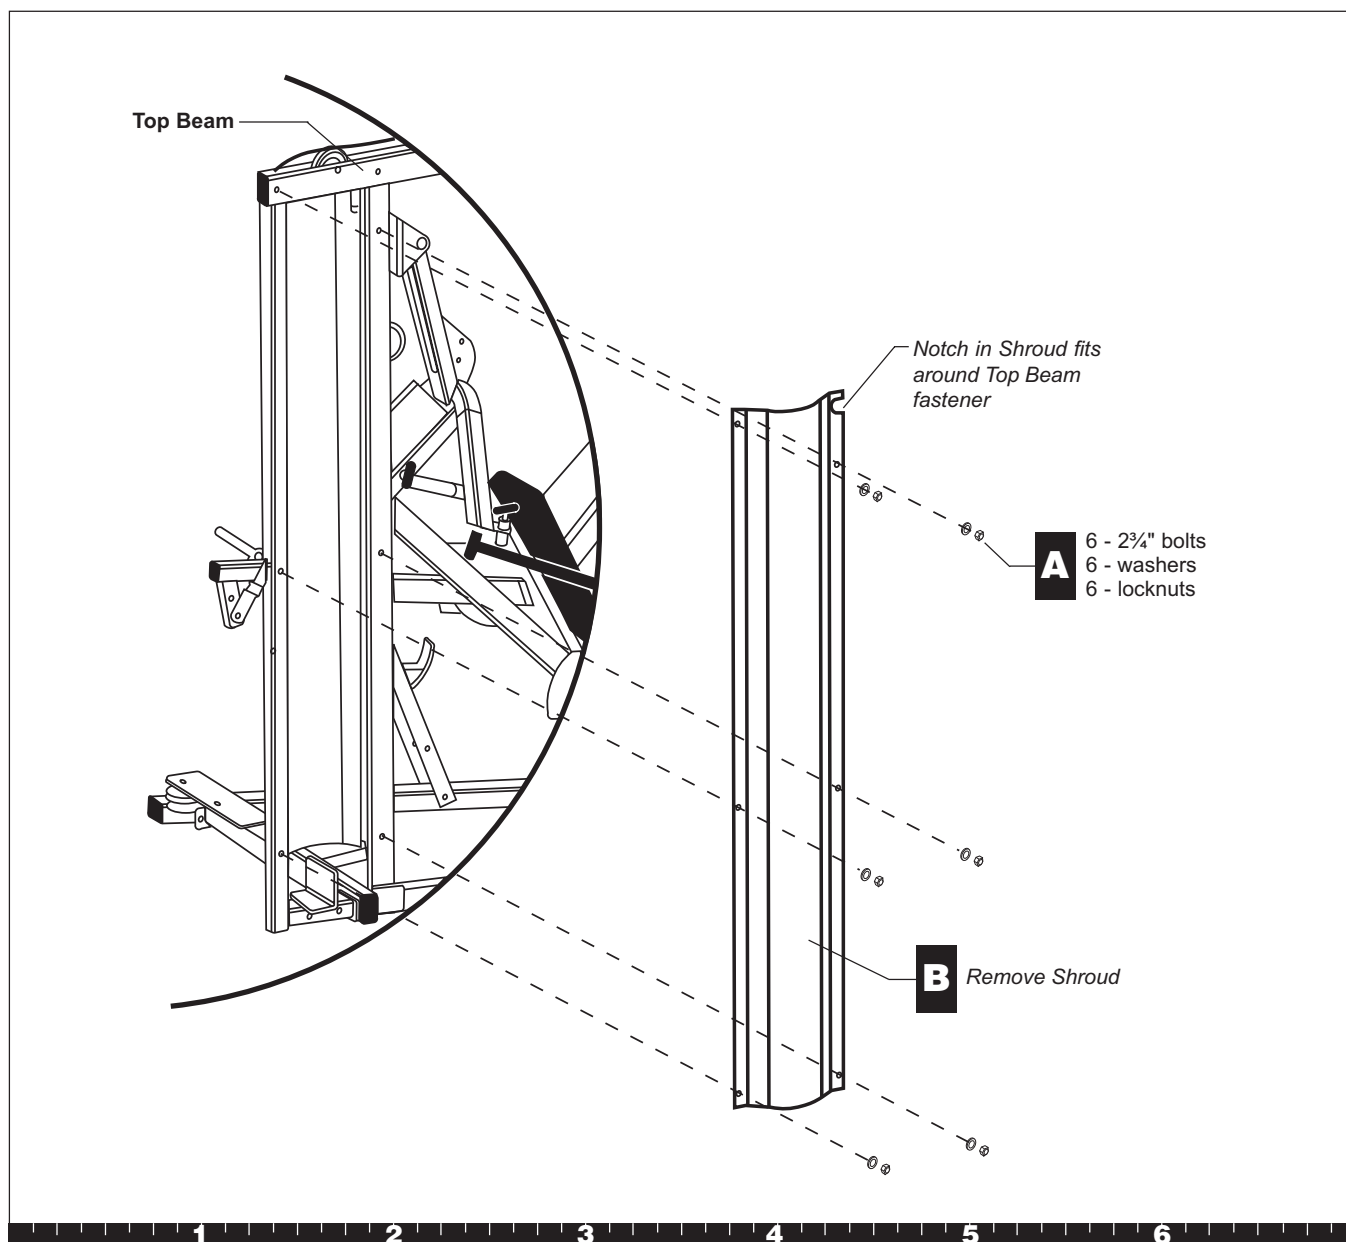


Step 1. Remove the Shroud

2. Attach the Cross Brace to the S3.25

Note: If you are assembling the Leg Press Option along with the S3.25, you should complete Step 10 in the *S3.25 Assembly and Maintenance Guide* before attaching the Cross Brace.

- A. Align the Cross Brace to the S3.25 Rear Upright and secure it using
two 3-inch bolts
four washers
two locknuts
Wrench tighten.

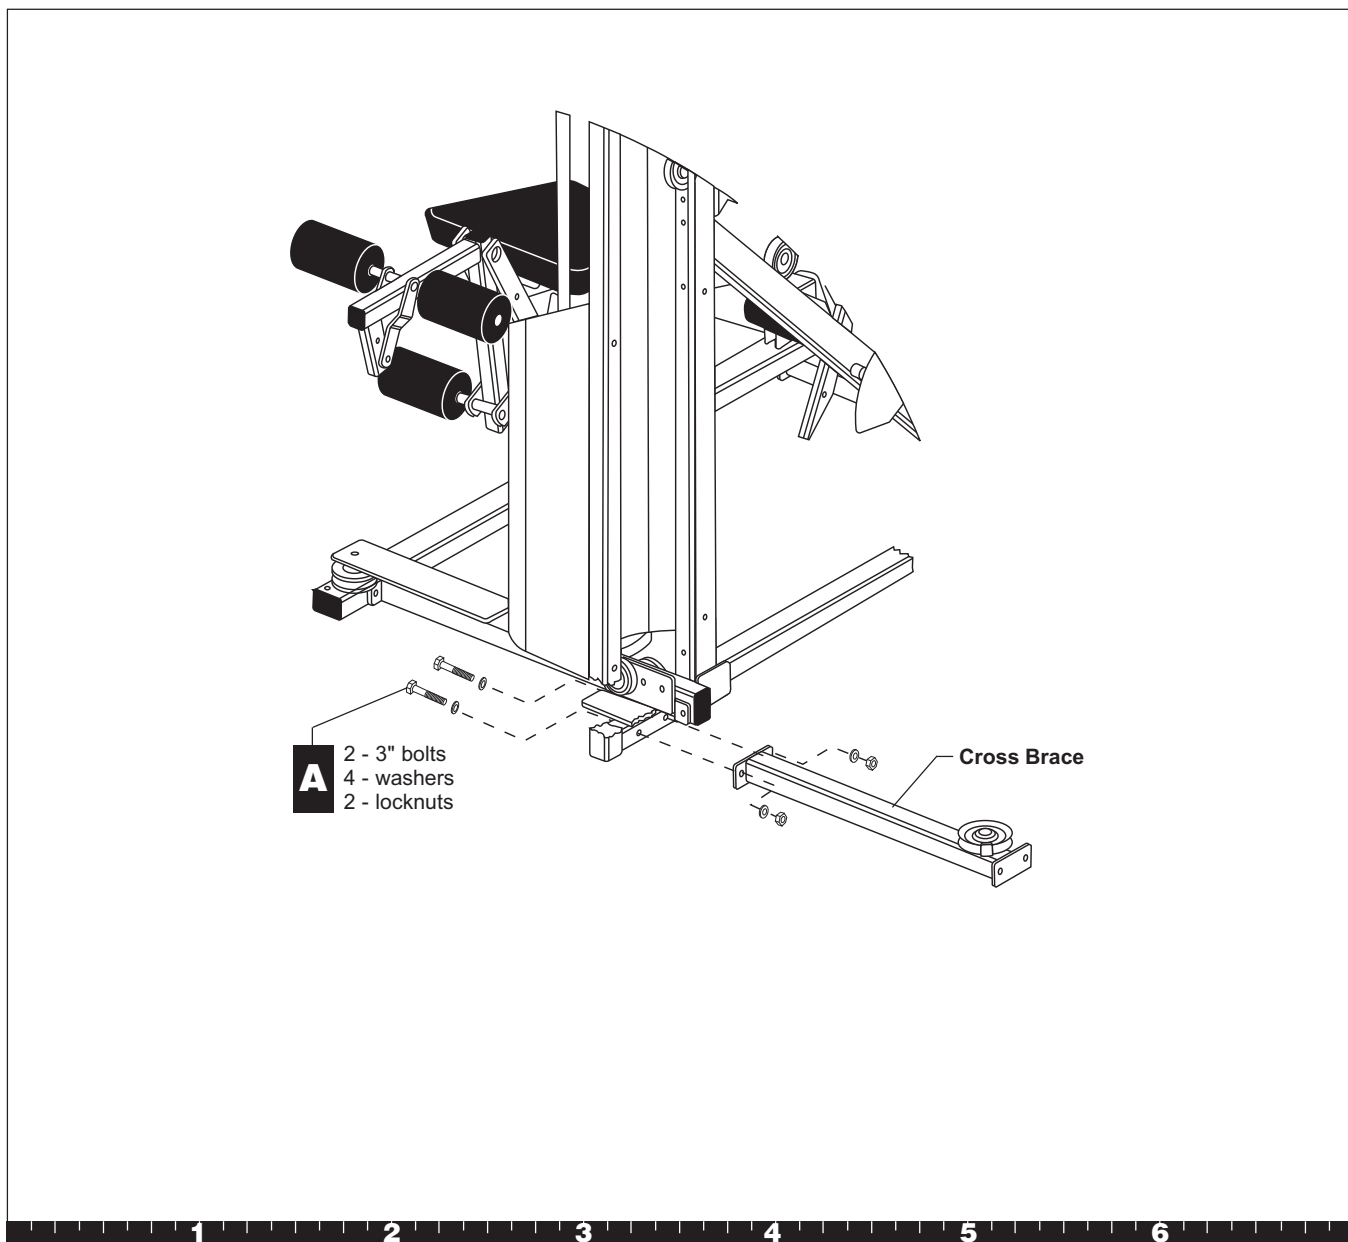


Step 2. Attach the Cross Brace to the S3.25

3. Assemble the Frame

- A. With someone helping you, lift the Seat Frame upright. Have your assistant hold it in place while you attach the Cross Brace in the next step.
- B. Attach the Cross Brace to the holes found at the front of the Seat Frame using two 3-inch bolts, four washers, and two locknuts. Wrench tighten.


Important: A label on the Seat Frame indicates the mounting holes you must use to attach the Cross Brace to the S3.25 Leg Press Option.

- C. Slide the Backpad Support into the Seat Frame, locking it in place with the Pop Pin.

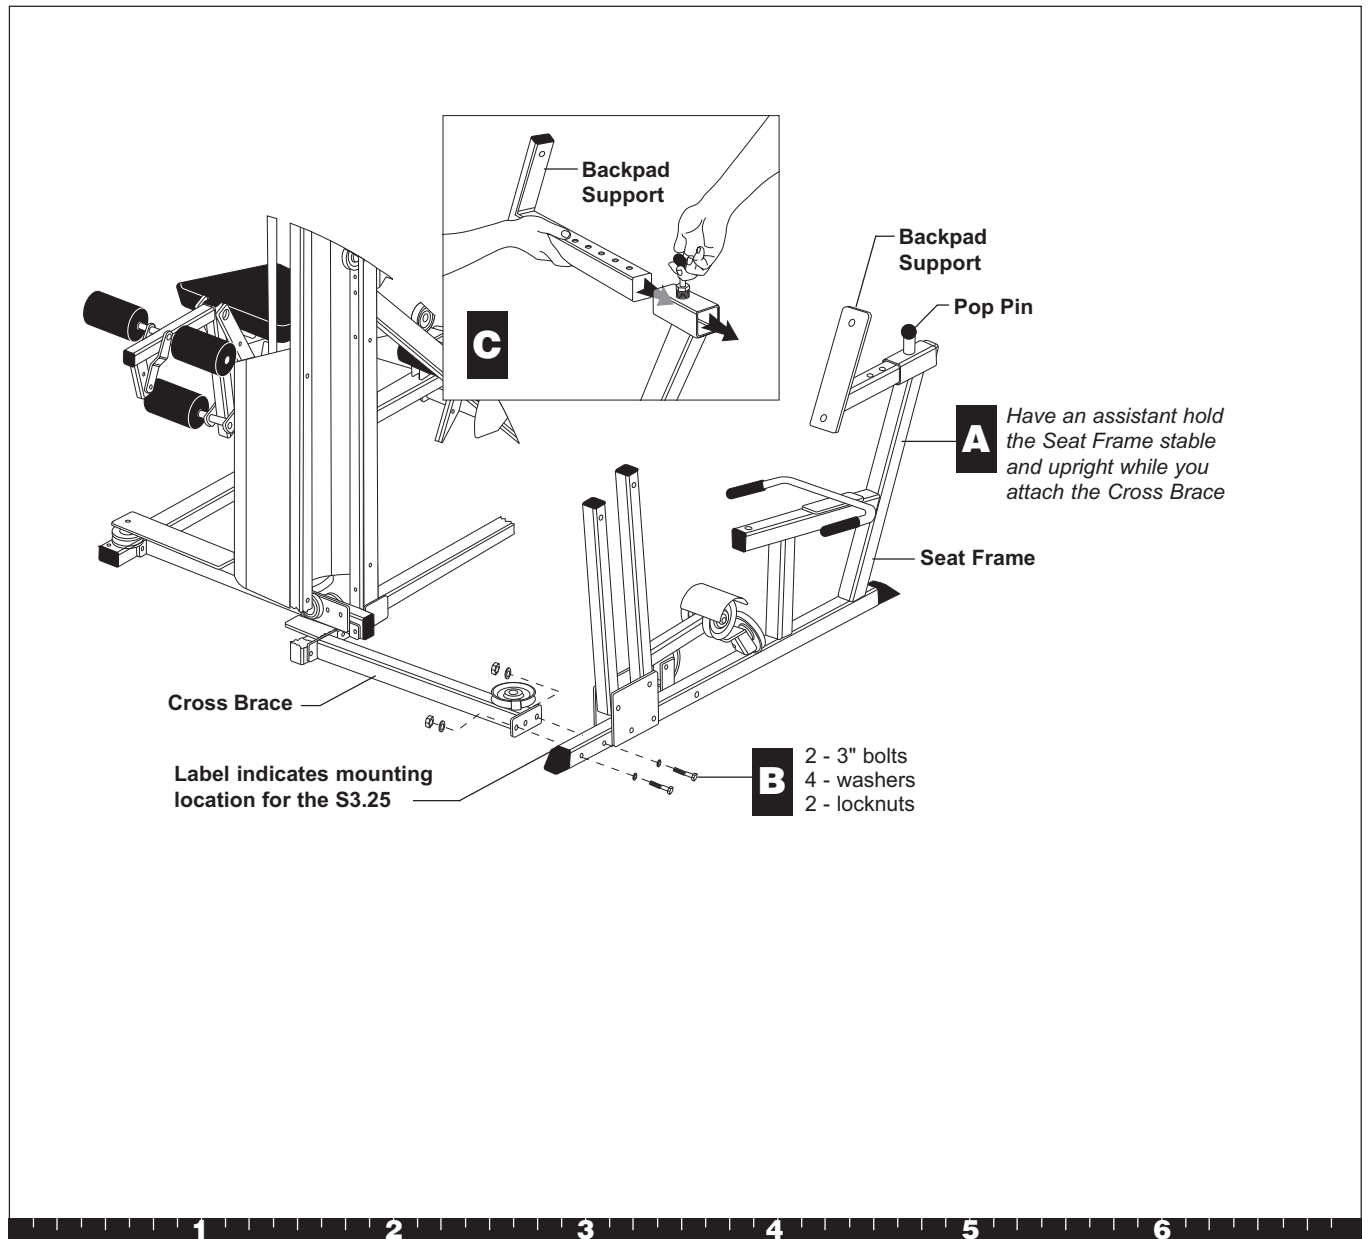

Step 3. Assemble the Frame

- D. Assemble the Footrest by resting the Pivot Arm on the Rubber Bumper. Make sure that the red arrow on the back of the Footrest points toward the ceiling.
- E. Attach the Footrest to the Pivot Arm and Pivot Tube using
 - two large 1/2-inch by 3-1/4-inch bolts
 - four 1/2-inch-diameter washers
 - two large 1/2-inch locknuts
 Wrench tighten enough to allow free movement of the Pivot Arm.
- F. Attach the Handle to the Seat Frame using
 - two 3-inch bolts
 - four washers
 - two locknuts
 Wrench tighten.

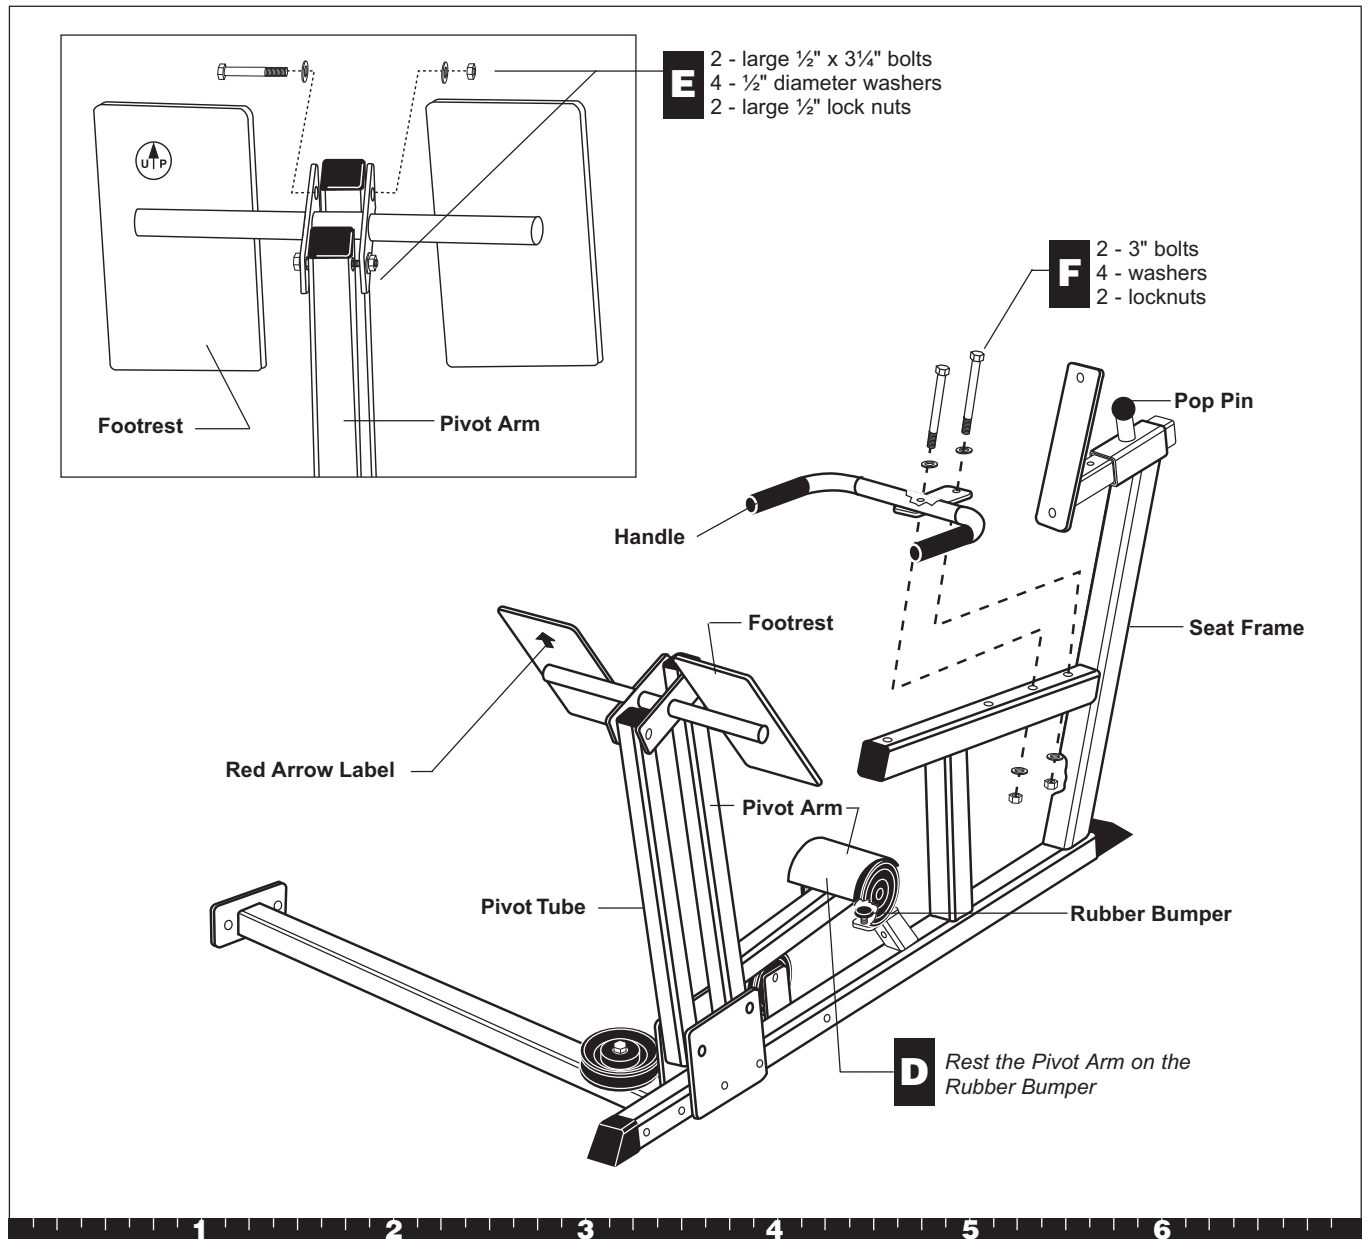


Step 3. Assemble the Frame, Continued

4. Assemble the Seat Pads

- A. Attach one of the Seat Pads to the Seat Bracket Support using two 1¼-inch bolts two washers Wrench tighten.
- B. Lift the Pop Pin and slide the Seat Pad out of the way to assemble the other Seat Pad.
- C. Attach the remaining Seat Pad to the Seat Frame using two 3-inch bolts two washers Wrench tighten.

Note: Make sure that the seams on the Seat Pads face down toward the frame.

Note: If you are assembling the Leg Press Option and the S3.25 simultaneously, return to Step 11 in the S3.25 Assembly and Maintenance Guide now.

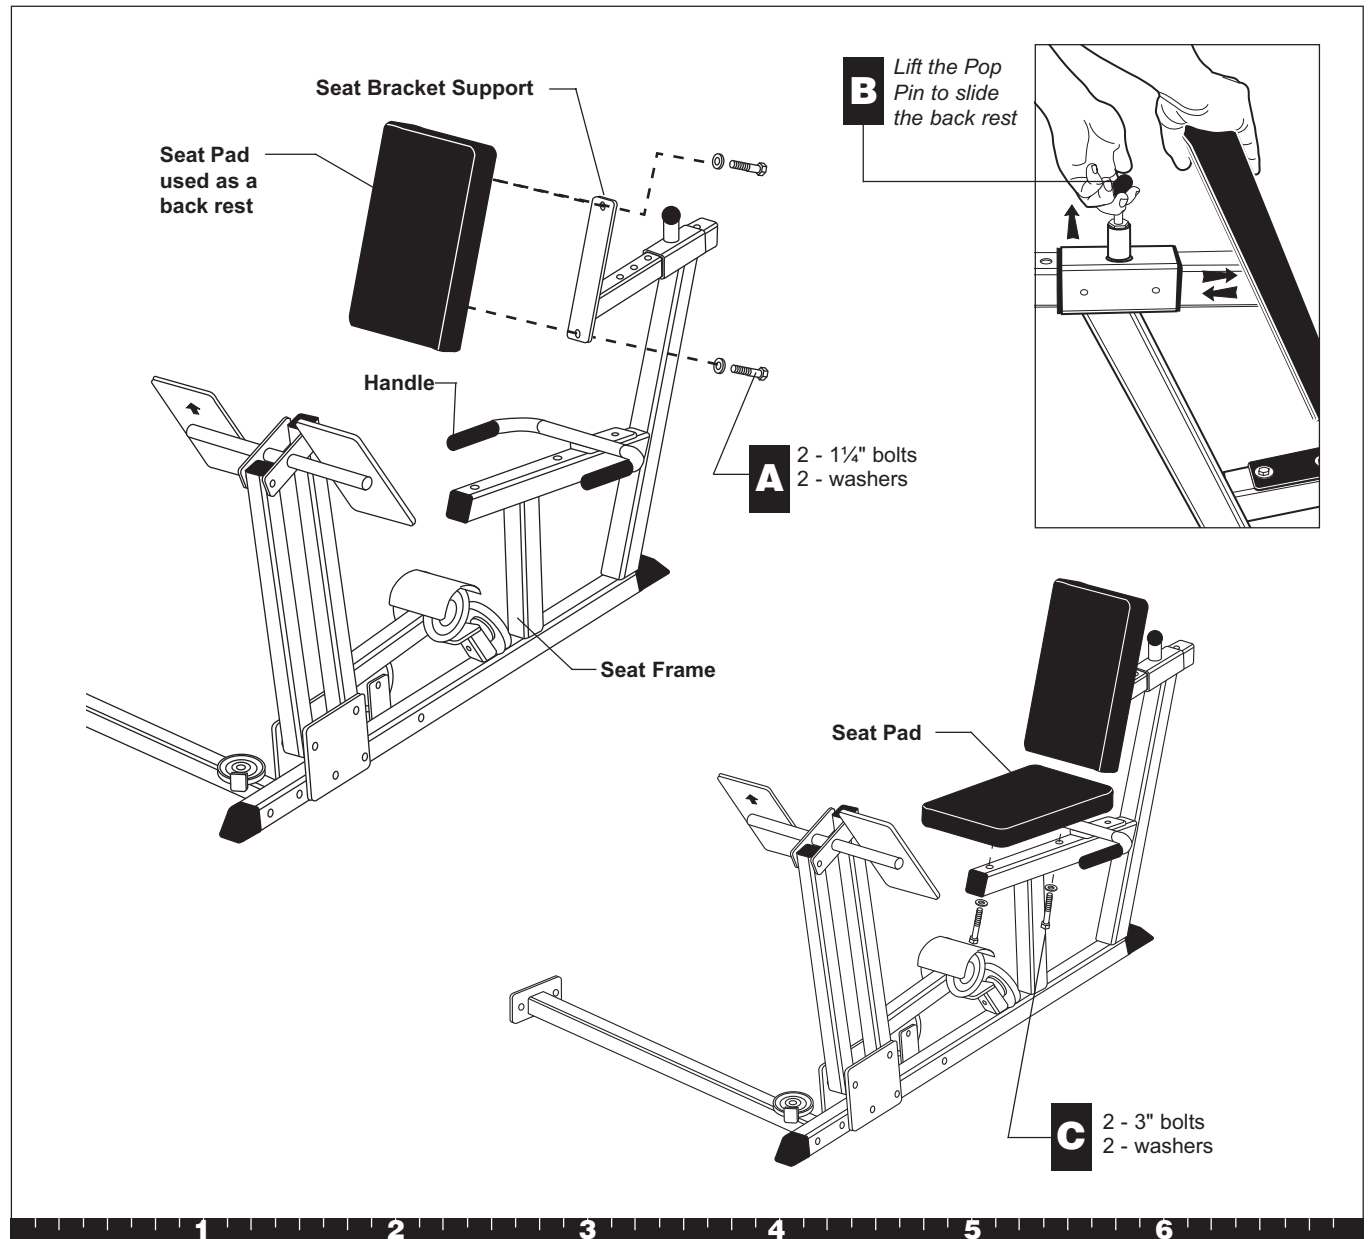


Step 4. Assemble the Seat Pads

5. Route the Cable

As you route the Cable through the pulleys on the Leg Press Option, wrench tighten the fasteners on each pulley as you go. Make sure that the Cable slides freely along the pulley (and beneath the cable retainer). Make sure that you are using the correct Cable before you tighten the fasteners.

- A. Attach the barrel end of Cable 40538-101 to the Seat Frame using one 4-inch bolt, one washer, and one locknut. Wrench tighten so that the barrel end of the Cable rotates freely.
- B. Loosen all the fasteners that attach the pulleys to the Seat Frame.
- C. Push the Pivot Arm forward so that the pulleys are easily accessible.
- D. Route the Cable around the pulley inside the Pivot Arm Cover that is on the same side as the barrel end of the Cable (see illustration). The Cable should slide along the pulley beneath the cable retainer. Wrench tighten this pulley's fasteners.
- E. You may need to slide the bolt out of the Pivot Arm Cover to wrap the Cable around the pulley.
- F. Continue to route the Cable around the pulleys as shown in the illustration. Make sure that the Cable slides freely along the pulleys (and beneath the cable retainers) before you wrench tighten their fasteners.
- G. Wrap the Cable around the 4½-inch pulley (and beneath its cable retainer) that is attached to the Cross Brace. Wrench tighten.

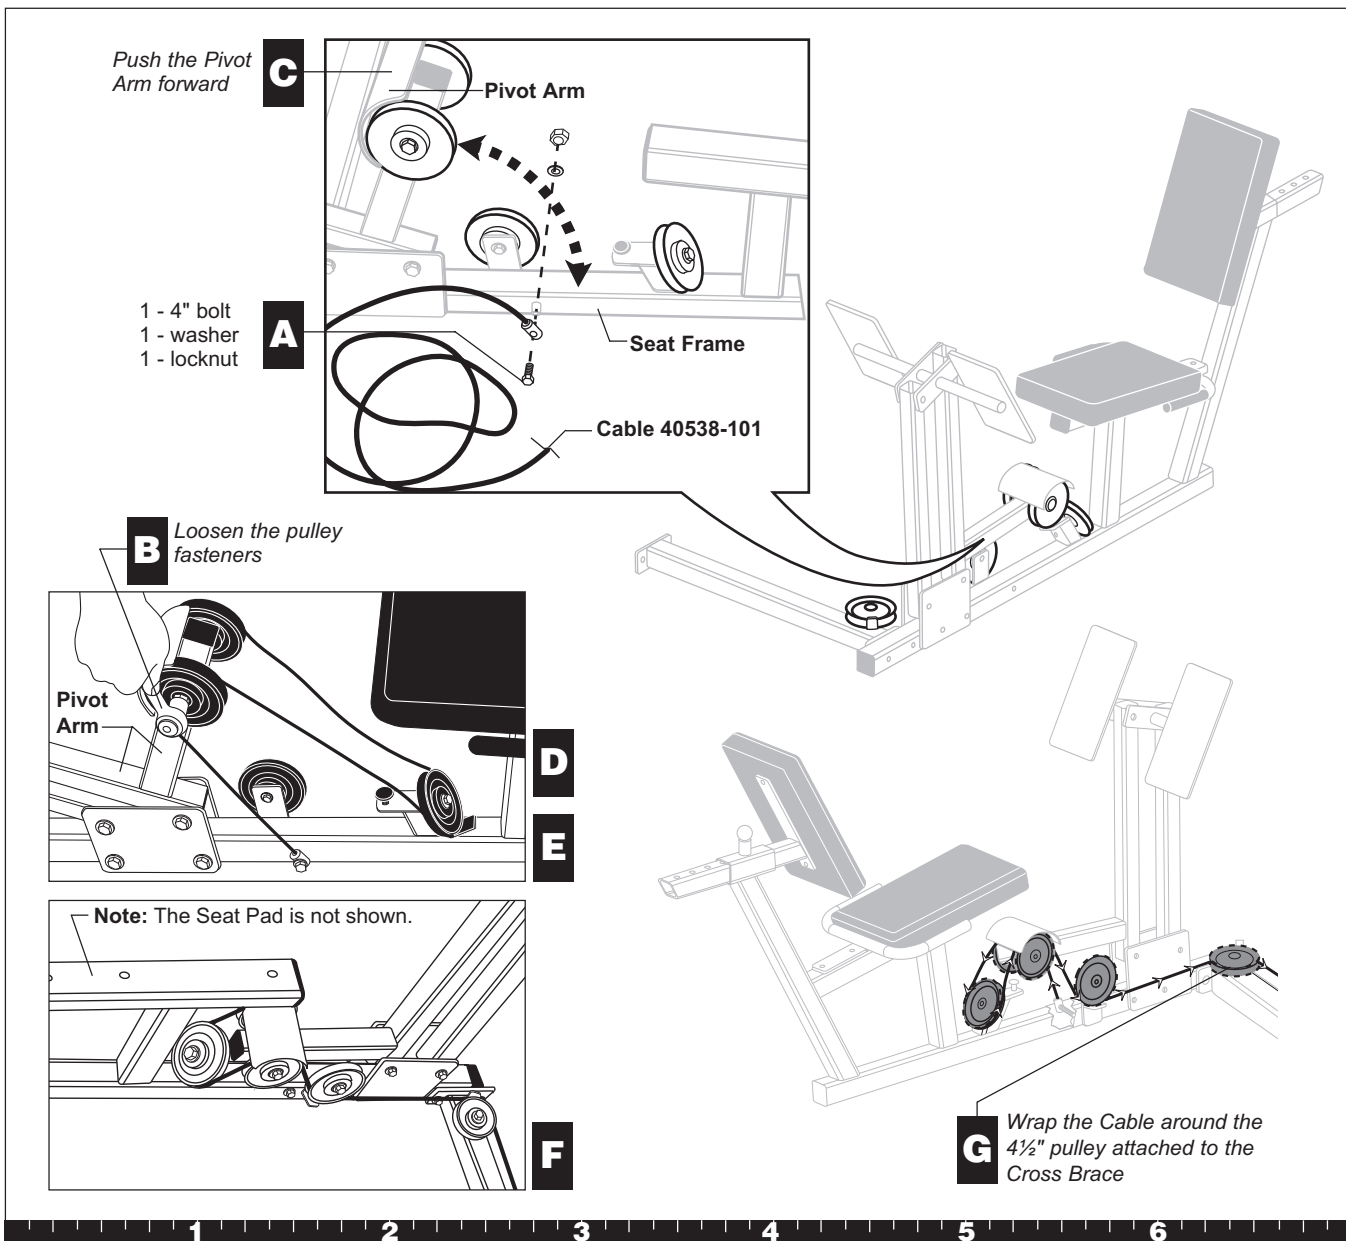

Step 5. Route the Cable


6. Assemble the Cable and Pulleys

You can identify Cables by the white numbers placed at the end of the Cable.

- A. Place Leg Press Option Cable 40538-101 between a cable retainer and one 3½-inch pulley. Attach the pulley to the Lower Pulley Bracket located at the base of the Rear Upright using one 2-inch bolt, two washers, and one locknut. Wrench tighten.

- B. From the Top Beam, remove the surgical tube and its fasteners.


Note: Discard the fasteners:
 one 3¼-inch bolt
 one one-inch barrel spacer
 two washers
 one locknut

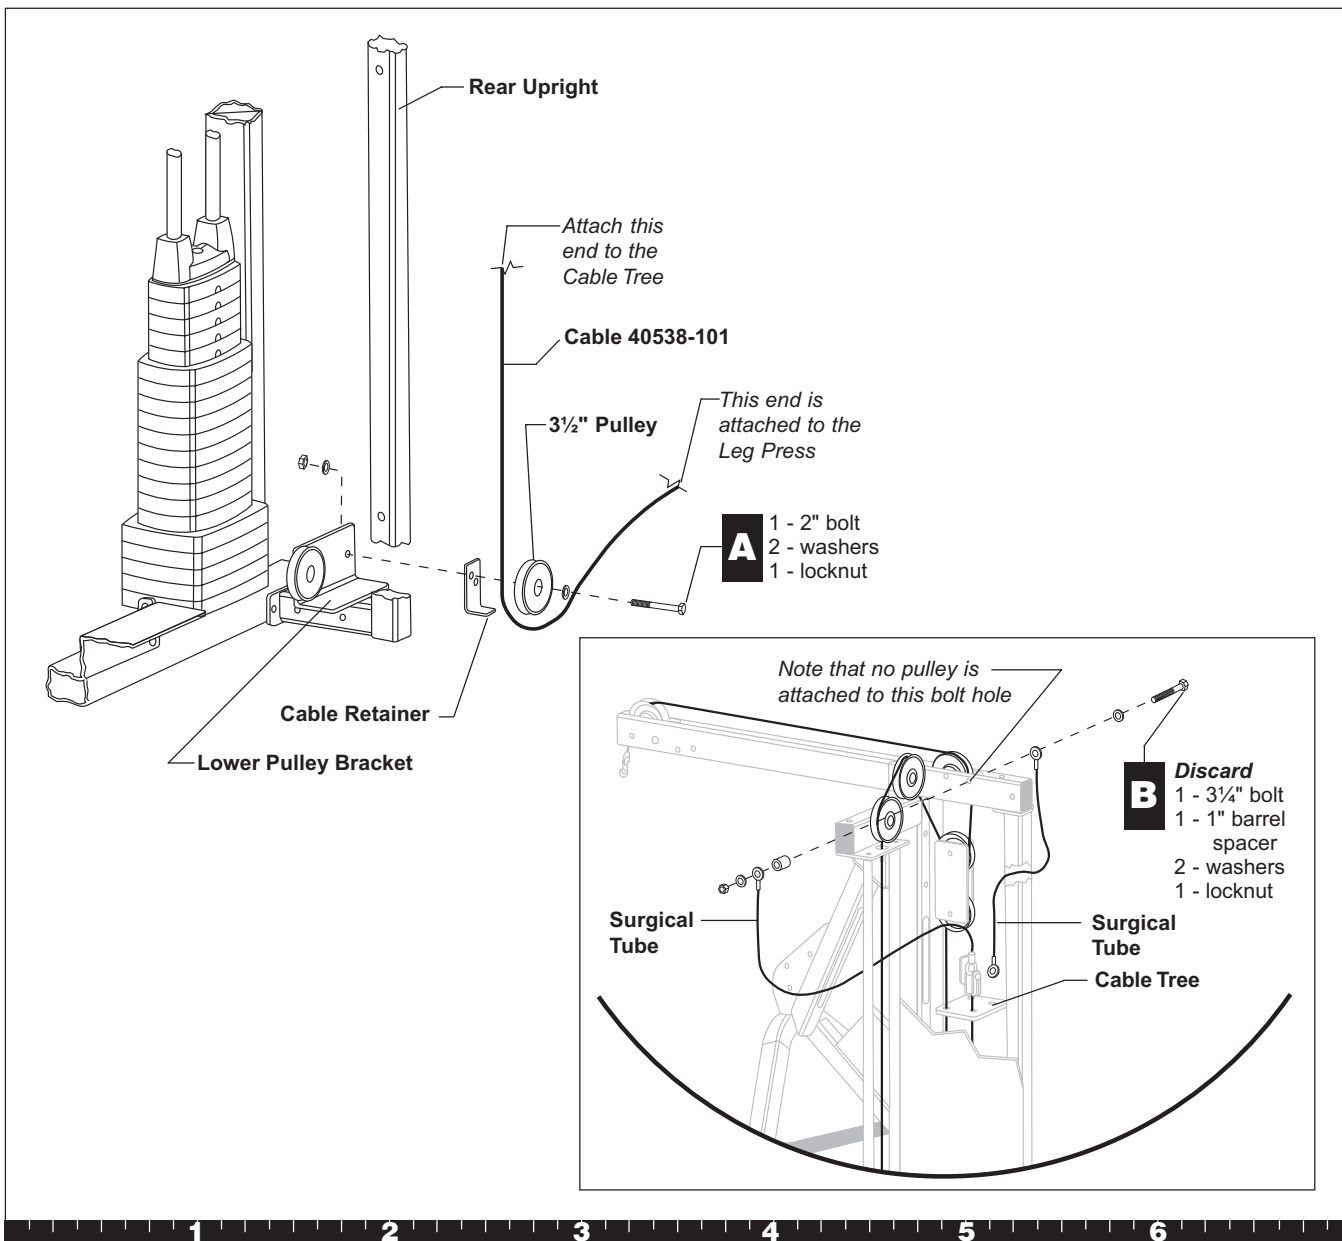

Step 6. Assemble the Cable and Pulleys

- C. Reattach the end of the original Surgical Tube from the Cable Tree to its prior location and place the new Surgical Tube that came with the Leg Press Option to the outside of the Top Beam using one 4-inch bolt, two washers, two ½-inch barrel spacers, one locknut. Wrench tighten.
- D. Place the ball-end of Leg Press Option Cable 40538-101 up through the Cable Tree and place it securely in the U-clip.
- E. Remove the buttonhead bolt and nylock nut from the U-clip.
- F. Attach the end of the original surgical tube to the Cable Tree using the 1¼-inch buttonhead bolt and thin nylock nut removed in Step 6E. Wrench tighten.


Note: If you are assembling the Leg Press Option and the S3.25 simultaneously, go to Step 21 in the S3.25 Assembly and Maintenance Guide now.

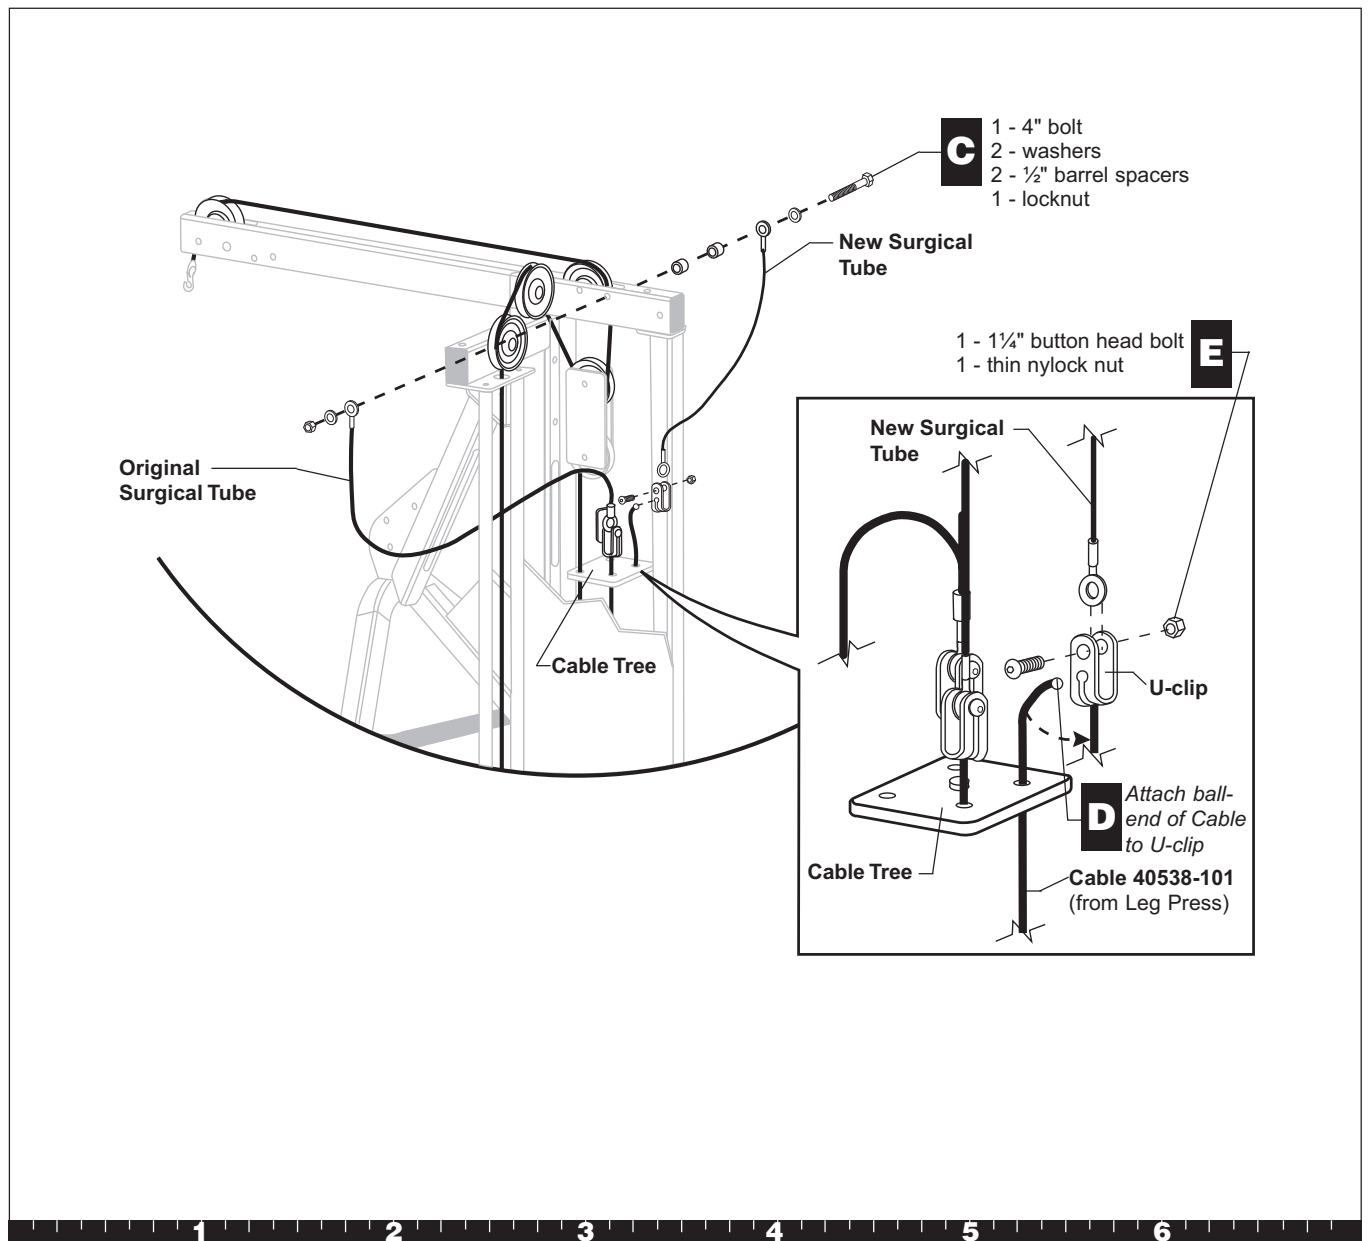

Step 6. Assemble the Cable and Pulleys, Continued

7. Replace the Shroud

- A. Pick up the Shroud and fasteners from the location where you left them in Step 4B.
- B. Replace the Shroud by realigning the mounting holes and inserting
six 2 $\frac{3}{4}$ -inch bolts
six washers
six locknuts
Wrench tighten.

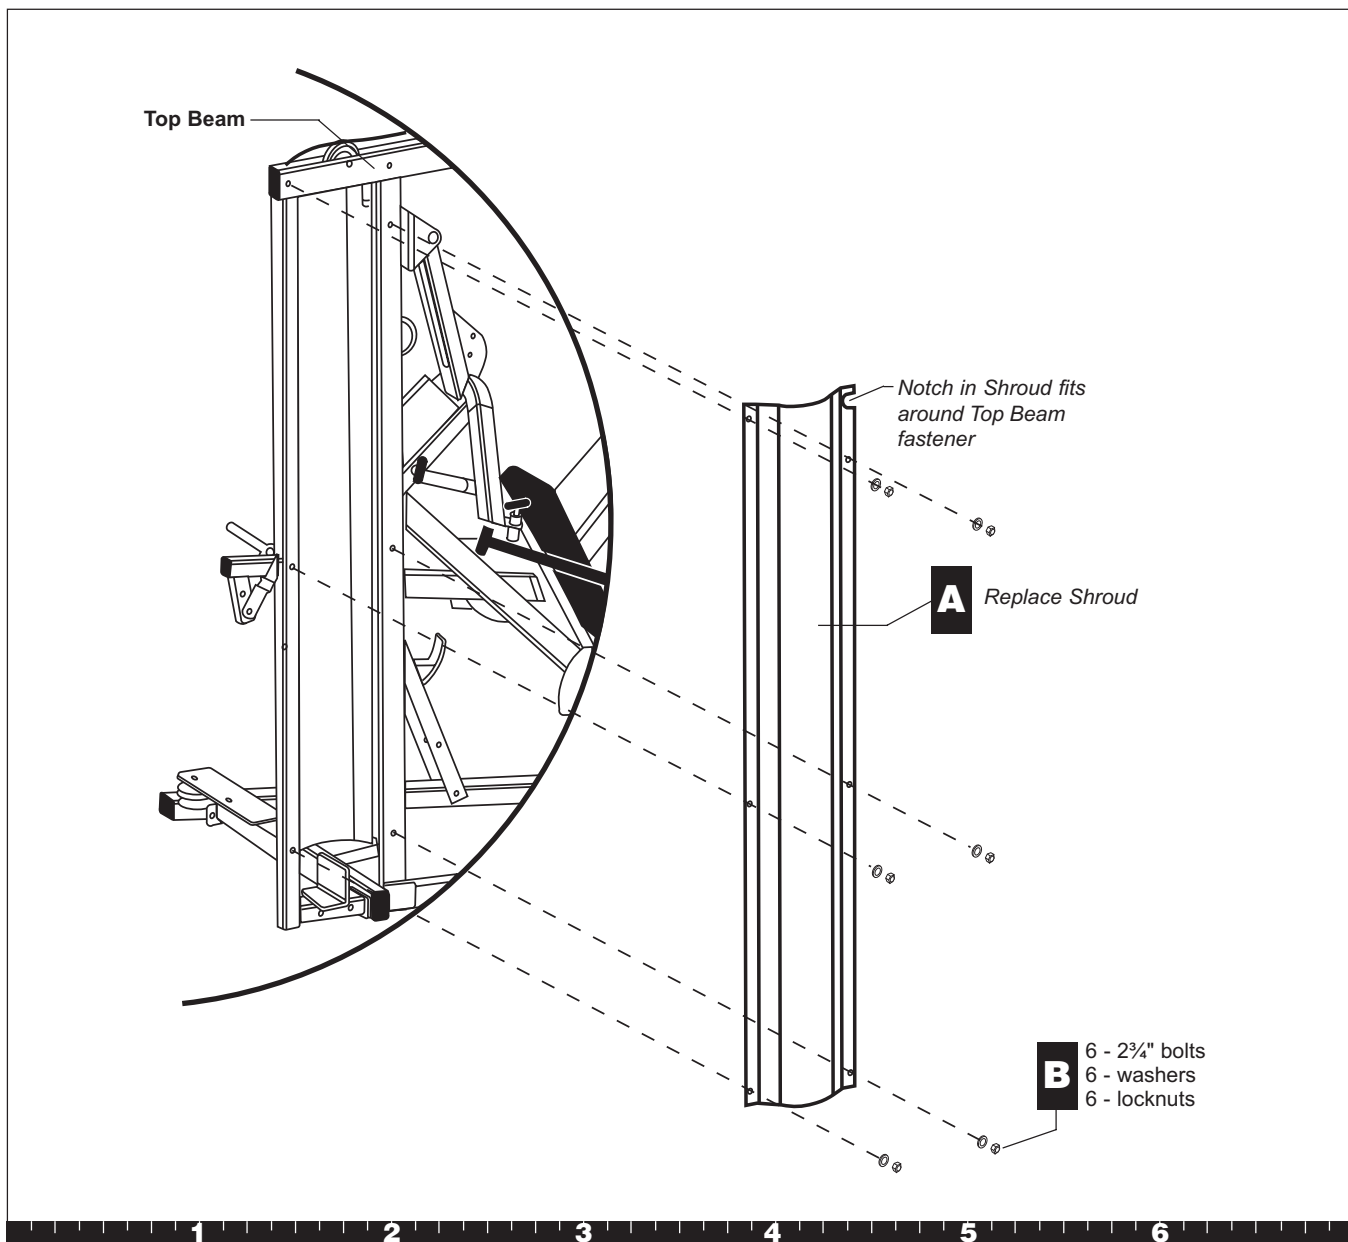

Step 7. Replace the Shroud

4

Adjustments

After the Leg Press Option is assembled, you should check the Cables for proper tension. These are some obvious signs that cable problems exist:


- ✓ Excess slack exists in the Cable.
- ✓ The Top Cap Weight does not rest squarely on the Weight Stack.
- ✓ The Cable rubs the inside edges of the pulleys.

CAUTION: Take the time to perform the following steps. If the Cables do not have the proper tension, you could damage the machine and void the Precor Limited Warranty.

Note: To adjust the Selector Stem, refer to the S3.25 Assembly and Maintenance Guide.

1. Stretch the Cable

- A. Sometimes a new cable must be stretched so that the Top Cap Weight rests on the Weight Stack. To lengthen the Cable, insert the Weight Pin at a comfortable weight level.
- B. Push up on the Chest Press Arms, and then slowly lower them.
- C. Make sure the Top Cap Weight rests squarely on the Weight Stack. If it does, no more adjustments are needed, and the Leg Press Option is ready to use. If the Top Cap Weight does not rest on the Top



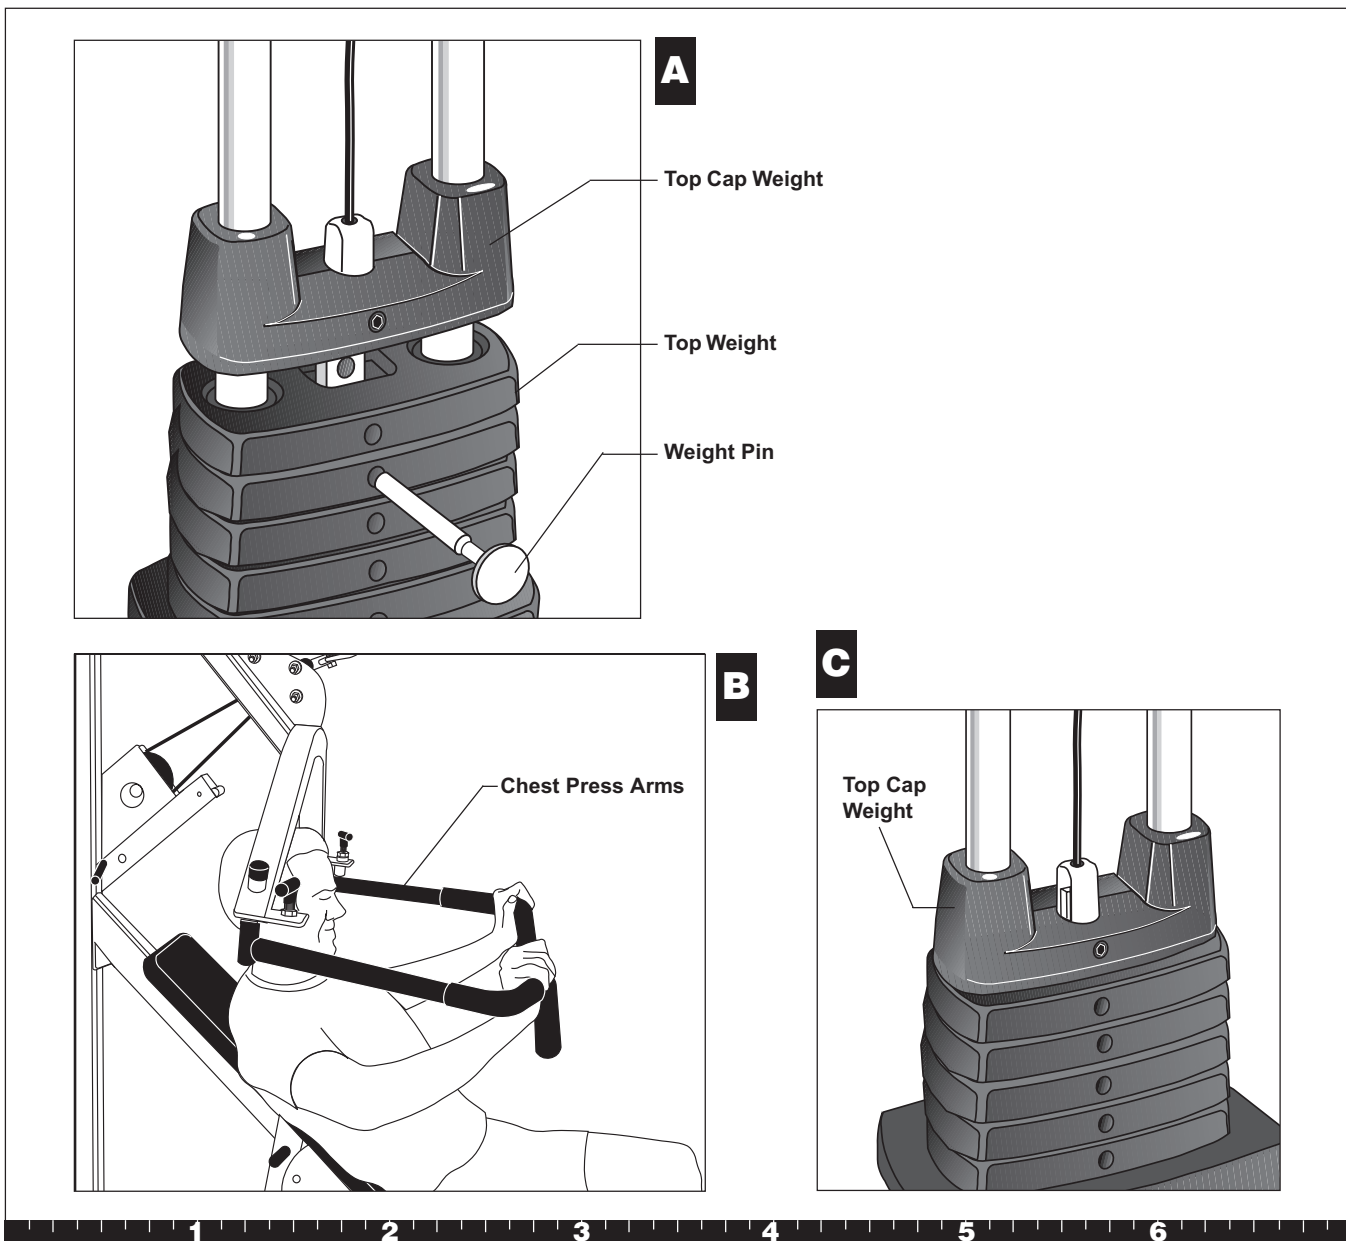


Weight then further adjustments are needed.
Continue with steps 2 and 3.

2. Rotate the Cam Washer

If the Top Cap Weight does not rest on the Top Weight, you must make further adjustments.

- A. Remove excess tension from the Cable by placing the Weight Pin into the Selector Stem just under the Top Cap Weight.
- B. To tighten or loosen the Cable tension, rotate the Cam Washer.
- C. Look to see that Top Cap Weight rests squarely on the Top Weight. If it does, no more adjustments are needed and the Leg Press Option is ready to use. If the Top Cap Weight does not rest on the Top Weight, then further adjustments are needed. Continue with step 3.

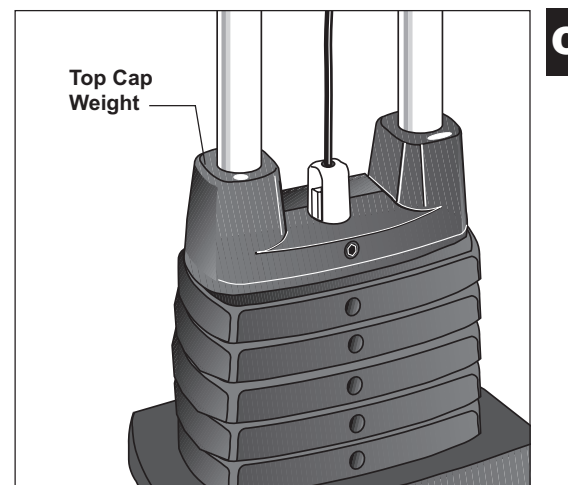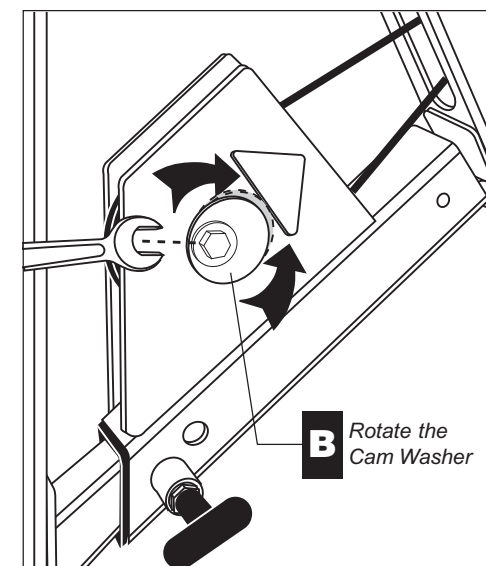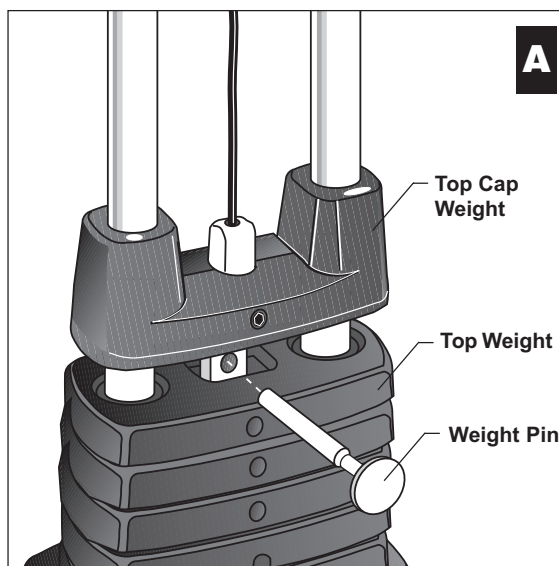

Step 2. Rotate the Cam Washer

3. Adjust the Rubber Bumper on the Leg Press Option

If the Top Cap Weight still does not rest on the Top Weight, you can make one final adjustment.


- A. If the Cable tension still needs adjusting, push the Pivot Arm up so that you can adjust the Rubber Bumper on the Leg Press Option.
- B. Rotate the Rubber Bumper up or down to tighten or loosen the Cable tension.

Important: Tighten the locknut against the bracket after you have properly adjusted the Cable tension.

- C. Check the weights. Move the Weight Pin to each Weight and Selector Stem location and replace the Weight Pin in the Weight Stack.

With the slack removed from the Cables, you are now ready to use the Leg Press Option. Thank you for choosing Precor Strength-Training Equipment.

Note: For maintenance instructions, refer to your S3.25 Assembly and Maintenance Guide.

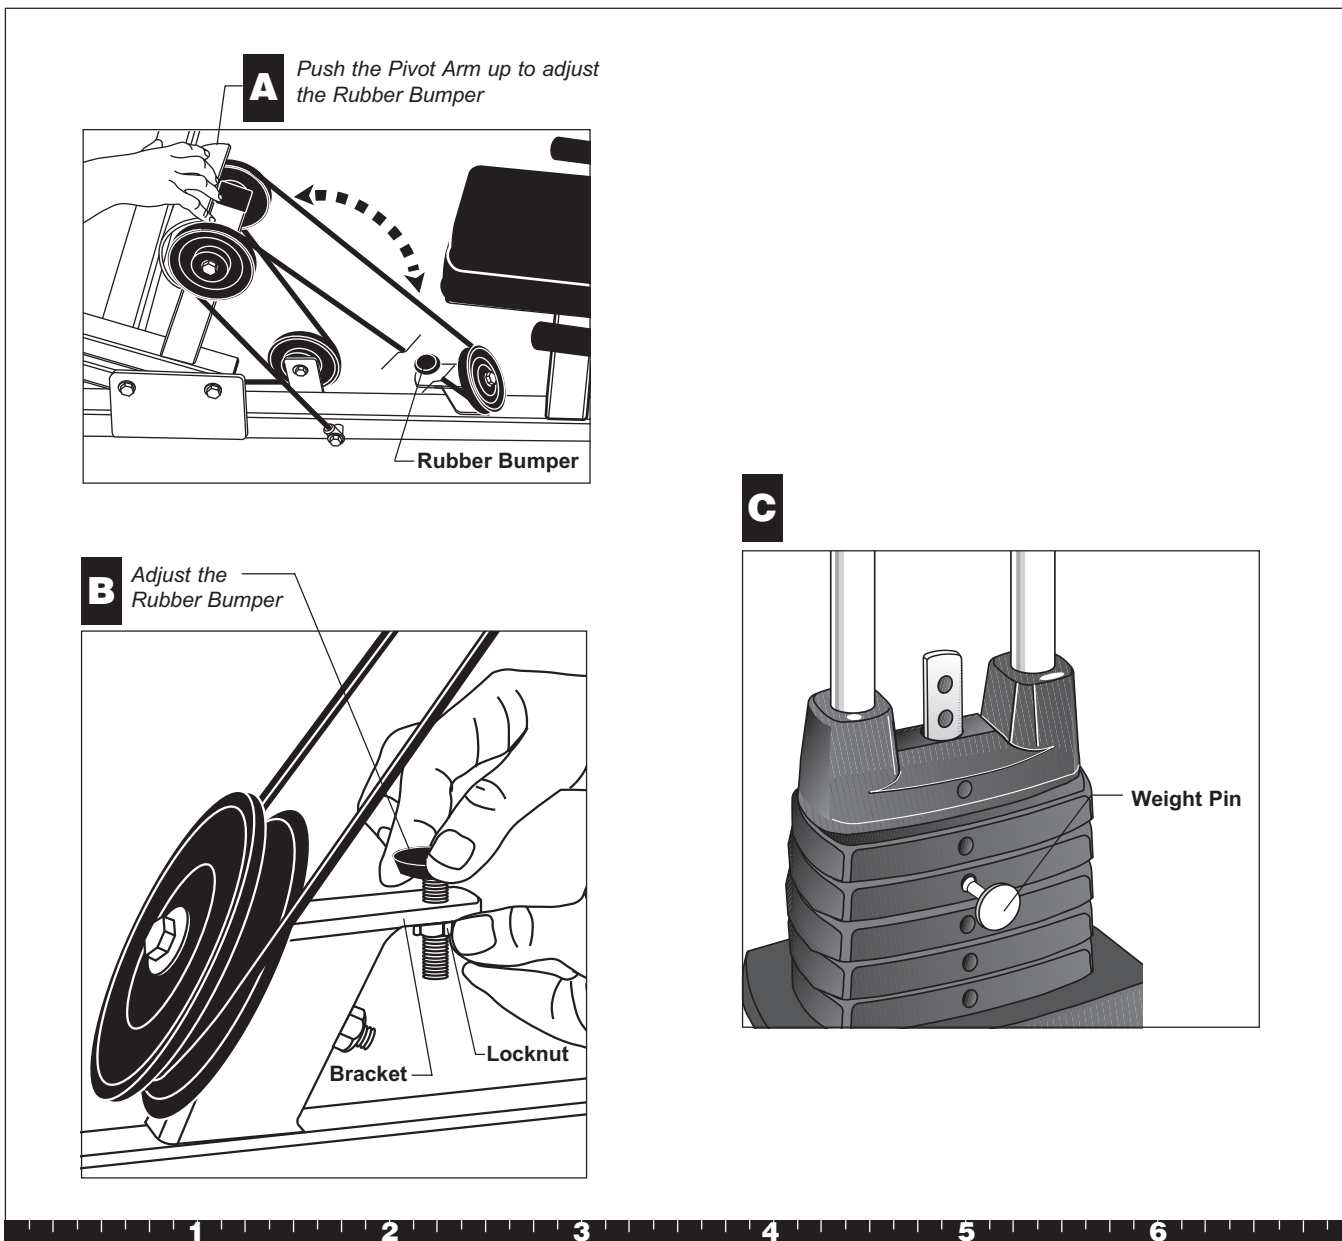

Step 3. Adjust the Rubber Bumper on the Leg Press Option

Residential Equipment Limited Warranty

Precor Incorporated warrants that all new Precor products are free of manufacturing defects in workmanship and materials. Parts repaired or replaced under the terms of this warranty will be warranted for the remainder of the original warranty period only. This warranty becomes effective at the invoice date of the original purchase.

Elliptical Fitness Crosstrainers and Motorized Treadmills (excluding EFX5.17 and Treadmills: 9.2 and 9.4 series) — Labor is covered for one year, parts are covered for five years plus a lifetime frame weld warranty covering parts-only repair or replacement parts. (Labor is not covered on frame replacement after one year.)

Products (StretchTrainer, Strength Equipment — formerly Pacific Fitness) other than Elliptical Fitness Crosstrainer and Motorized Treadmills (except options)

StretchTrainer — Labor is covered for a period of 90 days, parts are covered for a period of one year plus a lifetime frame weld warranty covering parts-only repair or replacement parts. (Labor is not covered on frame replacement after one year.)

Pacific Fitness Branded Strength Products and Precor Strength Products S3.xx

This is a parts only warranty. Labor costs are not covered.

1. Frame & Welds: Defective parts pertaining to frame structure, including all welded assembly parts, will be warranted for Lifetime.
2. Bearings, Guide rods, Cams, Pulleys, Belts, Cables, Hand grips, and Miscellaneous parts will be warranted for a period of three years. **Note that for the Precor Strength Products S3.xx, and the Pacific Fitness Solana and Zuma, the warranted period is five years.**
3. Upholstery will be warranted for a period of one year. A three month warranty applies to Naugahyde upholstery for Pacific Fitness Branded Strength Products only.

Return Policy: Proof of purchase is required to determine whether service on a Precor Strength Product/ Pacific Fitness Product during its warranty period will commence. Claims should be made to the dealer from whom you purchased the product. The purchaser is responsible for all transportation and insurance costs on returned or replaced equipment or parts. The purchaser also assumes any costs associated with the disassembling or reassembling of the replacement parts. WARRANTY BECOMES VOID IF PRECOR FINDS THE DEFECT A RESULT OF INCORRECT INSTALLATION, MISUSE, LACK OF PROPER MAINTENANCE OR ANY MODIFICATION NOT APPROVED BY PRECOR.

Options / Accessories / Battery-powered or Self-Operated Devices

Many options or accessories have components that are connected internally or mounted inside the electronic console. The following guidelines determine the warranty for these components. If the internal components are installed by the factory or by an authorized dealer as part of the original sale and delivery, they have a warranty that is identical to the warranty of the equipment in which they are connected or mounted. If the internal components are not installed by the factory or by an authorized dealer as part of the original sale and delivery, they have a 90 days parts and labor limited warranty. All components that are not internally connected have a 90 days parts only limited warranty. Satisfactory proof of purchase is required in all cases.

PRECOR'S SOLE LIABILITY IS LIMITED TO REPAIR OR REPLACEMENT OF PARTS ACCORDING TO THE TERMS AND CONDITIONS OF THESE LIMITED WARRANTIES, AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE ABOVE WRITTEN WARRANTIES. IN NO EVENT WILL PRECOR OR THE SELLING DEALER BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES SUCH AS INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR DAMAGE TO OTHER PROPERTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Keep this for your records. Purchased From: _____

Phone Number: _____ Product/Model: _____

Serial #: _____

Effective 01 August 2001

P/N 36287-108

Conditions

This warranty is valid only in accordance with the conditions set forth below.

1. Warranty applies to the Precor product only while
 - A) it remains in the possession of the original purchaser and proof of purchase is demonstrated,
 - B) it has not been subjected to accident, misuse, abuse, improper service, or non-Precor modification and
 - C) claims are made within the warranty period.
2. Warranty of all Precor products applies to residential use only (unless specifically stated by the factory, in writing, to be warranted for commercial use) and is void when products are used in a non-residential environment or installed in a country other than where sold.
3. This warranty does not cover damage or equipment failure caused by residential wiring not in compliance with electrical codes or Precor owner's manual specifications, or failure to provide reasonable and necessary maintenance as outlined in the owner's manual.
4. During the labor period Precor compensates Servicers for warranty trips within their normal service area to repair motorized treadmills and elliptical fitness crosstrainers at the customer's location. You may be charged a trip charge outside the service area, or for on-site warranty repairs, or for on-site warranty repairs of strength products, within the service area.
5. Precor Limited Warranty service may be obtained by contacting the authorized dealer from where you purchased the equipment or by contacting a Precor Factory Authorized Service Center, or by calling 1-800-4-PRECOR (1-800-477-3267).
6. Except in Canada, Precor does not pay labor outside the United States. Equipment limited warranty is void when equipment is installed in a country other than where sold. For specific warranty details, contact a local Precor dealer.

This Limited Warranty shall not apply to:

1. Software (PROM) limitations or corrections.
2. Batteries or other consumables, or cosmetic items, grips, seats, labels, or wheels.
3. Repairs performed on Precor equipment missing a serial number or with a serial tag that has been altered or defaced.
4. Service calls to correct installation of the equipment or instruct owners on how to use the equipment.
5. Pick-up, delivery, or freight charges involved with repairs.
6. Any labor costs incurred beyond the applicable labor warranty period.

Please fill out the Warranty Registration and mail it to Precor.



Residential Equipment Limited Warranty

Thank you for purchasing a PRECOR product. In order that we may continue to serve you in the future, please take a few minutes to complete and return this warranty registration.

The undersigned hereby acknowledges receipt of the Precor Limited Warranty and affirms that the date of purchase was 20____, further, that the undersigned has read and understands the conditions and terms of the Precor Limited Warranty in its entirety. For your protection, complete the Precor Limited Warranty registration card within 10 days from date of purchase and mail it to Precor. In the event of a safety modification or for other reasons Precor might deem necessary, we will contact you directly.

Name of Facility _____

Contact Person _____ Mr. Ms.

Phone Number _____ - _____

Address _____

City _____ State _____ Zip Code _____

Purchased From _____ State _____ Zip Code _____ - _____

City _____ State _____ Zip Code _____ - _____


Serial # _____

Purchaser's Signature _____

Serial number is located on the shipping box and on the product.

Please detach and return this portion.

Please fill out the Warranty Registration and mail it to Precor.

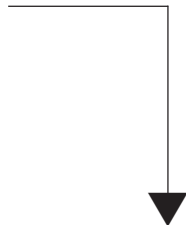

Warranty Registration Card

PRECOR[®]
USA
Precor Incorporated
20031 142nd Avenue NE
P.O. Box 7202
Woodinville, WA USA 98072-4002

PLACE
STAMP
HERE

S3.25 Leg Press Option Specifications

Length: 60 inches (152 cm)

Height: 33 inches (84 cm)

Width: 30 inches (76 cm)

Shipping weight: 125 lb (57 kg)

PRECOR[®]
USA

Precor Incorporated
20031 142nd Avenue NE
P.O. Box 7202
Woodinville, WA USA 98072-4002

Precor and Pacific Fitness are registered trademarks of Precor Incorporated.
Specifications subject to change without notice.

Copyright 2001 Precor Incorporated. Precor web site: www.precor.com

NOTICE:

Precor is widely recognized for its innovative, award winning designs of exercise equipment. Precor aggressively seeks U.S. and foreign patents for both the mechanical construction and the visual aspects of its product design. Any party contemplating the use of Precor's product designs is hereby forewarned that Precor considers the unauthorized appropriation of its proprietary rights to be a very serious matter. Precor will vigorously pursue all unauthorized appropriation of its proprietary rights.

S3.25 LPO Literature Kit # 44659-102
Leg Press Assembly Instructions # 44660-102
Exploded Views # 44661-101
Warranty Card # 36287-108
Effective date: September 10, 2001